



NOTE: STREAM AROUND PUMP WORK AREA

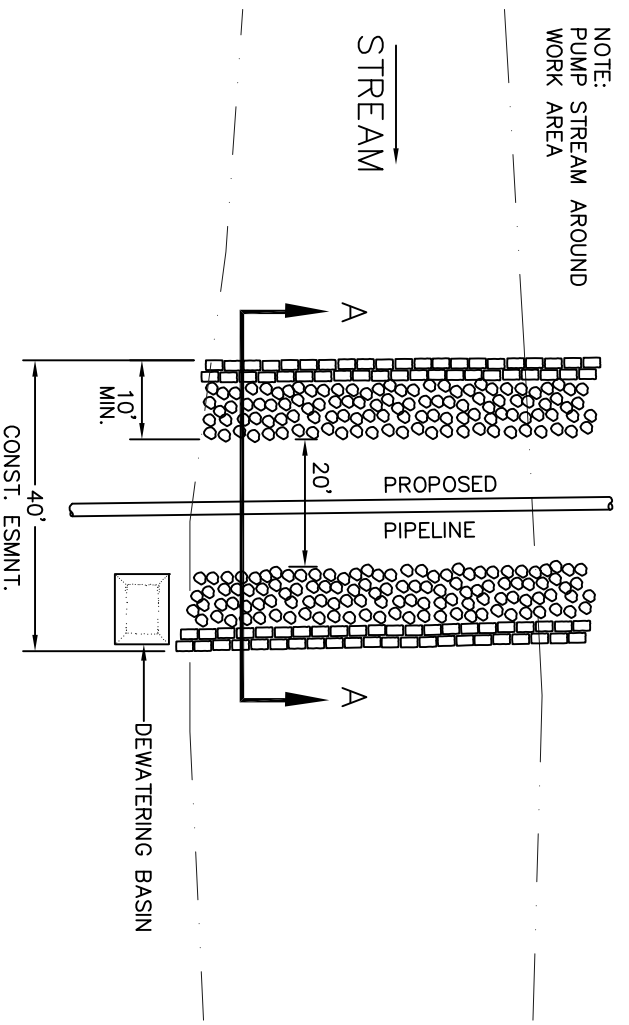

PLAN

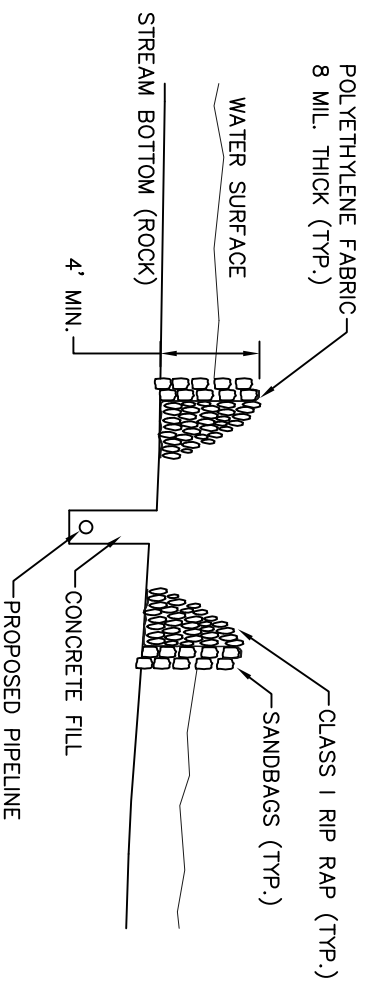

SECTION A-A

- NOTES:
1. CONSTRUCT COFFER DAM AND UTILIZE DEWATERING BASIN TO DRAIN WORK AREA.
 2. PUMP STREAM AROUND WORK AREA.
 3. CONVERT COFFERDAM TO STREAM CROSSING WHEN NO LONGER NEEDED.
 4. CARE MUST BE TAKEN TO AVOID CONTAMINATION TO THE STREAM FROM POURED CONCRETE SEALANT.

CITY OF HIGH POINT
 NORTH CAROLINA
 ENGINEERING SERVICES DEPARTMENT
 APPROVED... FEBRUARY 17, 2009
 BSK
 DIRECTOR

ISSUED 2-17-09
 REVISIONS

STANDARD DRAWING FOR
COFFER DAM
 FOR BYPASS PUMPING PIPELINE STREAM CROSSINGS

COFFERDAM1.DWG

606.00

SHEET 1 OF 1